


27MM, 35MM & 50MM BASSWOOD


Solid Timber Venetian Blinds Installation Instructions

Mounting Hardware:

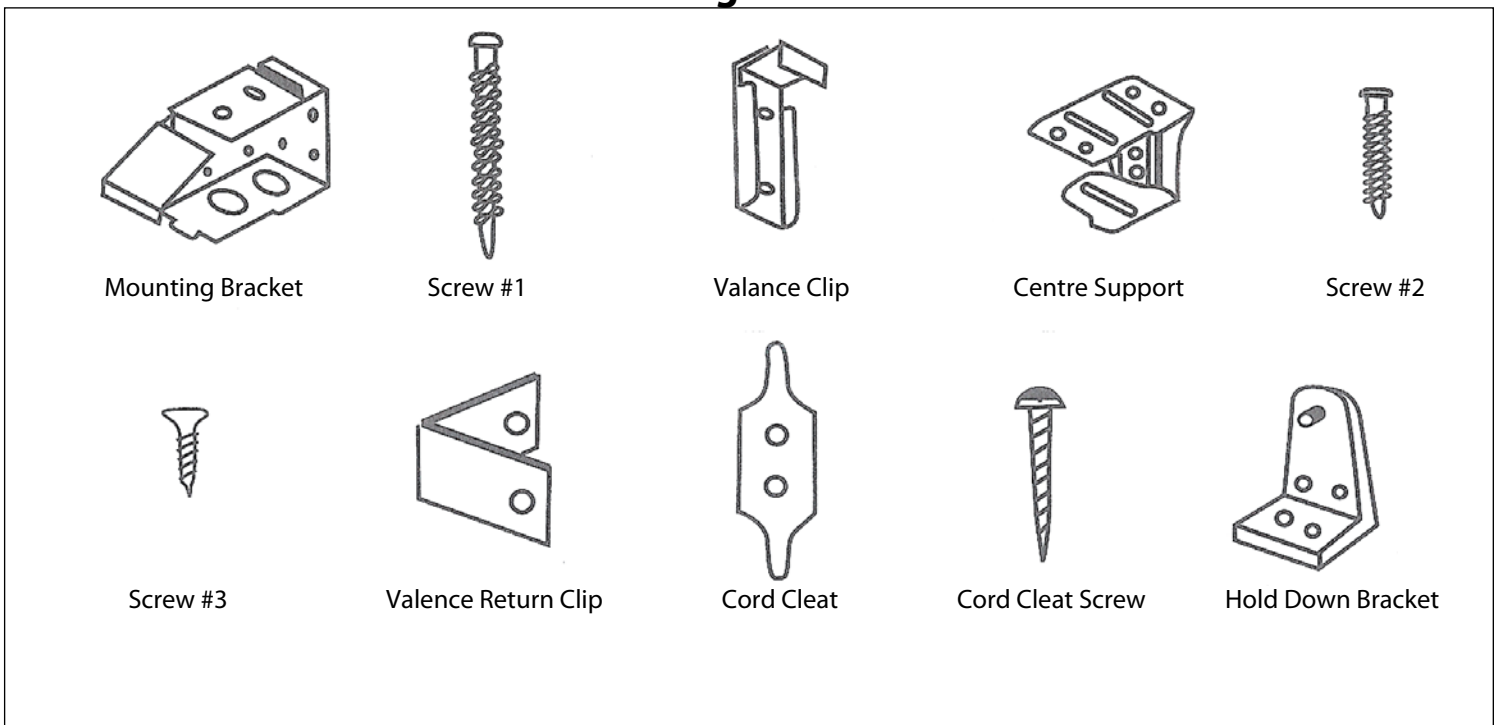


(Note: Centre support supplied for blind width 100 cm or over)


Tools Recommended for Installation:

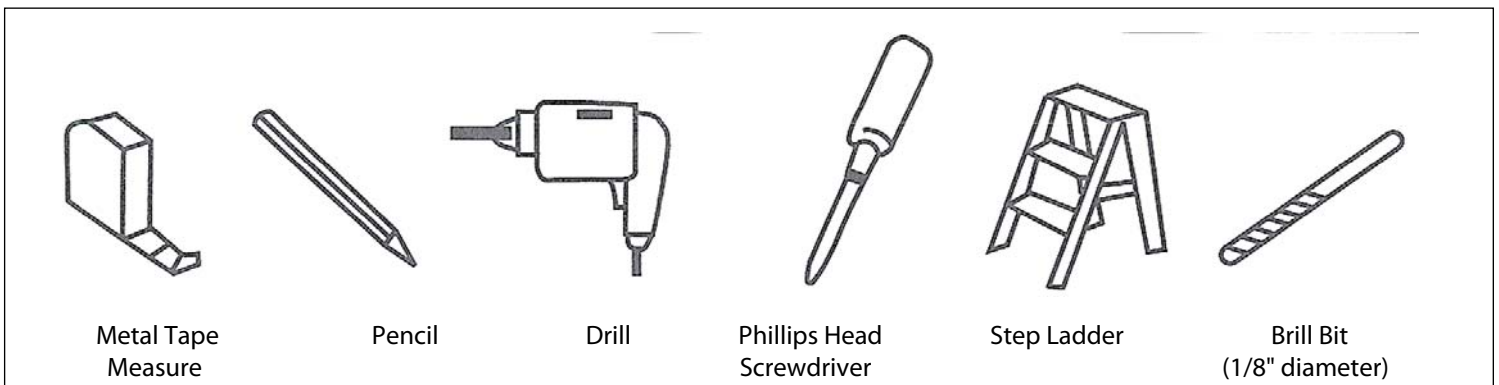


Mounting Instructions

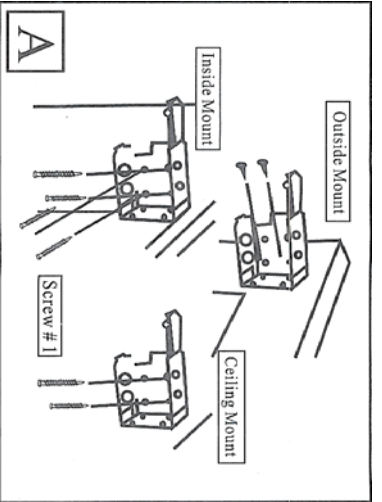


Brackets should be placed at the width of blind's head rail 6mm past each end. The bracket does not necessarily need to touch the inside face of the window frame.

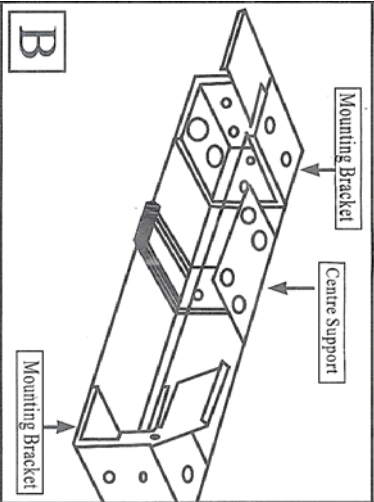


Align the top of the centre support bracket with the top of the mounting bracket before installation. Install with the bigger flap of the centre support bracket on the top side and clear of the slat ladder positions.

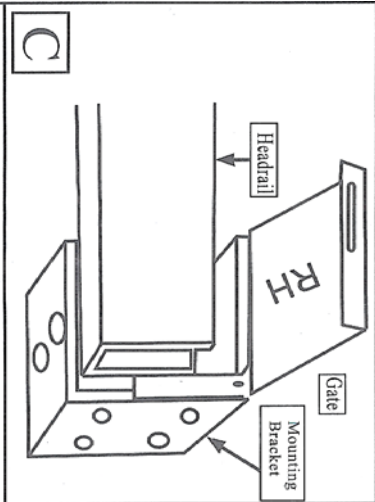


Push rail into brackets. Then press gate to close brackets.

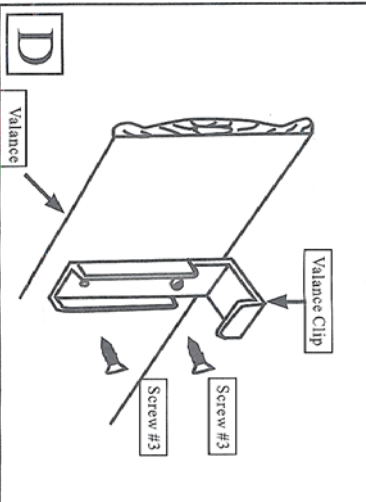


Screw Valance clips onto the back side of the valance with screws provided (Screw #3).

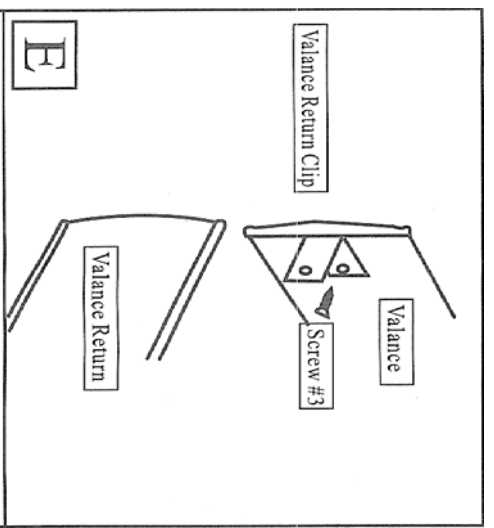

For Outside Mount: Screw one end of the valance return clip onto the valance return clip onto the valance using screw #3. Align the edge of the valance return with the valance. Screw the other end of the valance return clip onto the valance return

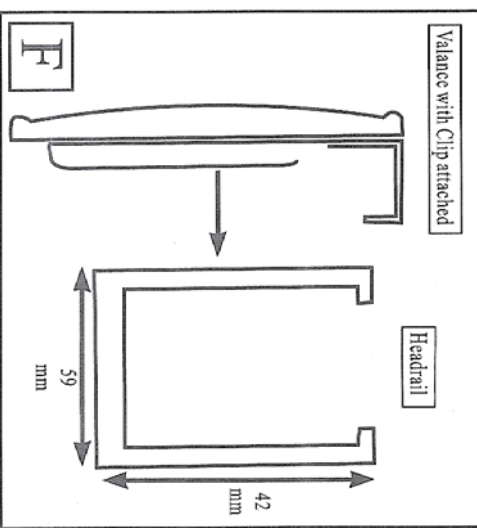


Hook Valance clip with valance attached onto the top of the head rail

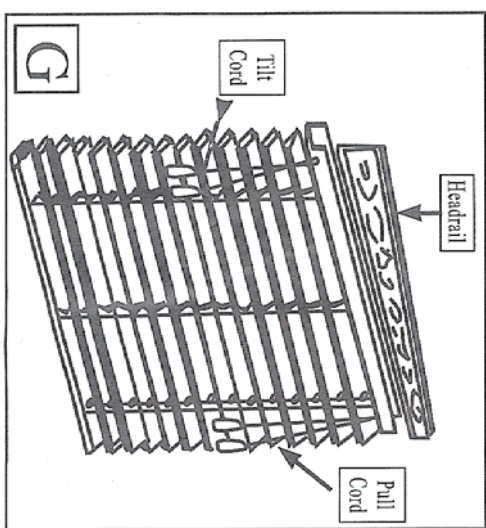

Always tilt blind horizontally before raising/lowering to extend the life of the blind. **To Lower Blind:** Move cord to the left, pulling down gently until cord lock releases. **To Raise Blind:** pull cord downward until blind reaches desired height. **To Lock Cord:** Pull cord right and release. Cord will lock automatically.

Installing Hold Down Brackets (optional):

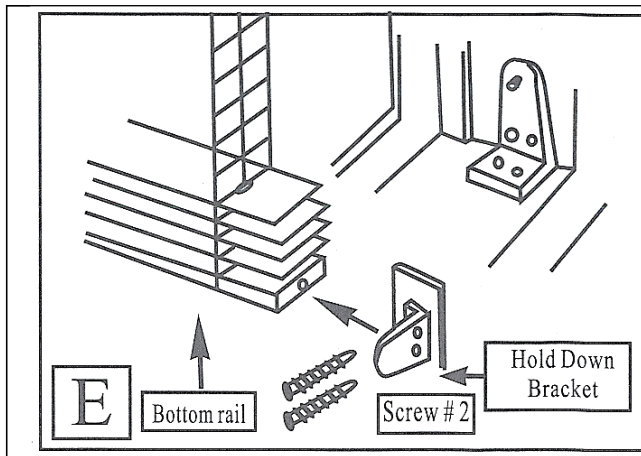

Hold Down Brackets: Using two small screws, screw hold down bracket to window facing or wall. Snap bracket pin ends into the hole at bottom rail end.


Recommended Care For Wooden Blinds

1. Only raise or lower the blind when the slats are in the horizontal(open position). Larger blinds must be raised or lowered in stages. Raising or lowering in one singular motion places excessive stress on the mechanism, strings and brackets.
2. It is not recommended that wooden blinds be fitted in damp or wet environments as warpage may occur.
3. Dust blinds regularly.
4. If the blind becomes damp or wet, wipe down immediately. The slats should be horizontal (open) and the blind released and lowered completely. Allow to dry by removing the blinds from the brackets and lay down on a hard surface. Do not place in direct sunlight as excessive heat may cause the slats to warp. If the blinds are excessively wet, do not place the blinds on to a surface that may absorb any stain.
5. This wooden blinds does not require any oiling.

If you have any doubts about the care or maintenance of your wooden blind, do not hesitate to contact your nearest supplier for advice.

⚠ WARNING

Reduce Risk of Strangulation to Infants and Toddlers. Position Safety Cord-Stops before using Blinds

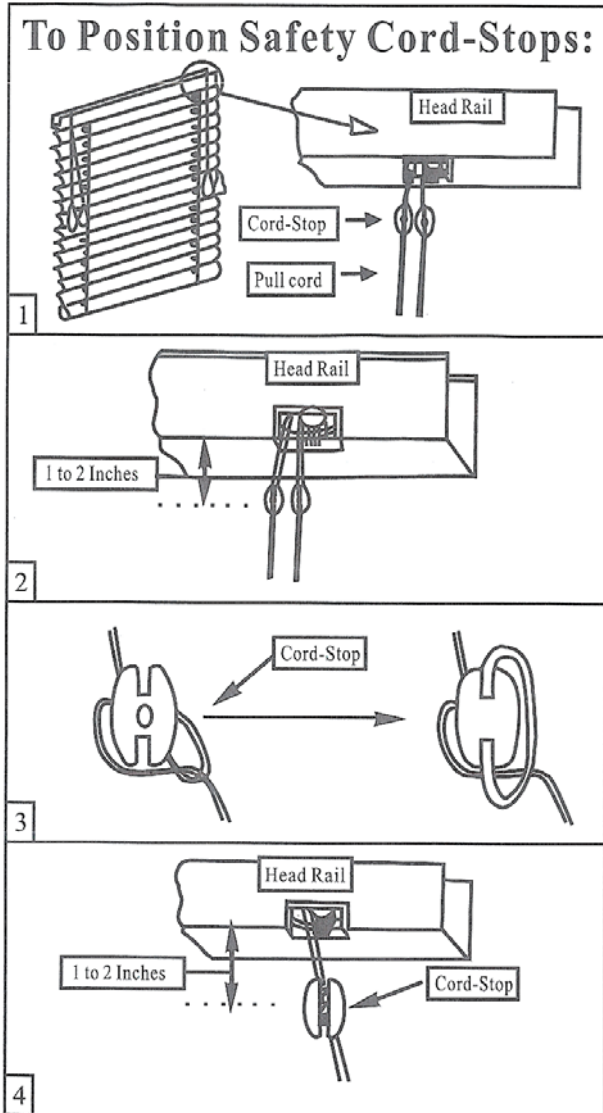


1. Install blind as directed by manufacturer, making sure head rail is securely fastened. Lower blind to maximum desired length and lock into place

2. Measure the distance from head rail to cord-stops. If cord-stops are 1 to 2 inches below the head rail, no further adjustment is needed. Your blinds are ready to use.

3. If cord-stops ARE NOT 1 to 2 inches below head rail, loosen (but do not untie) the knot surrounding the cord-stops.

4. Push both the cord-stop and the loosened knot toward the head rail until the cord-stop is 1 to 2 inches below the head rail. Hold cord-stop in place and pull firmly on pull cord to re-tighten knot. Repeat steps 2, 3 & 4 for each cord stop.

NOTE: Use of Hold Down Brackets is recommended to fully utilise the safety feature of the cord-stops.

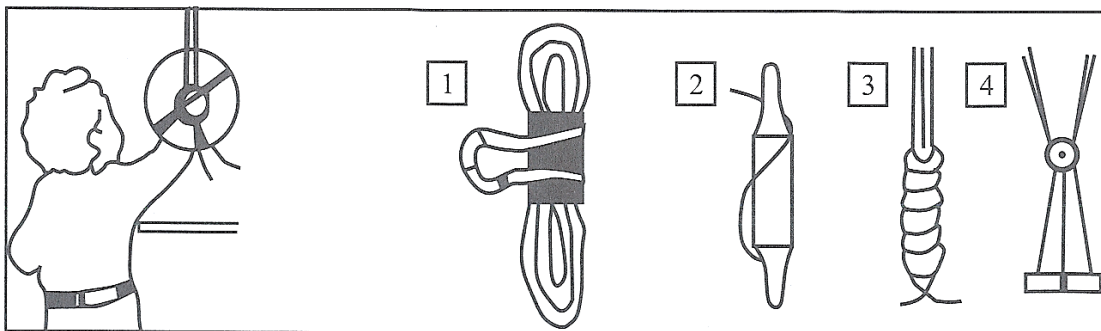

WARNING! Children can be strangled in blind or drapery cords. To keep cords out of reach of children, use these methods:

1. Clamp or clothes pin
2. Cleat
3. Tie the cord to itself
4. Tie-down device